

Quick installation guide


Main unit/front camera installation

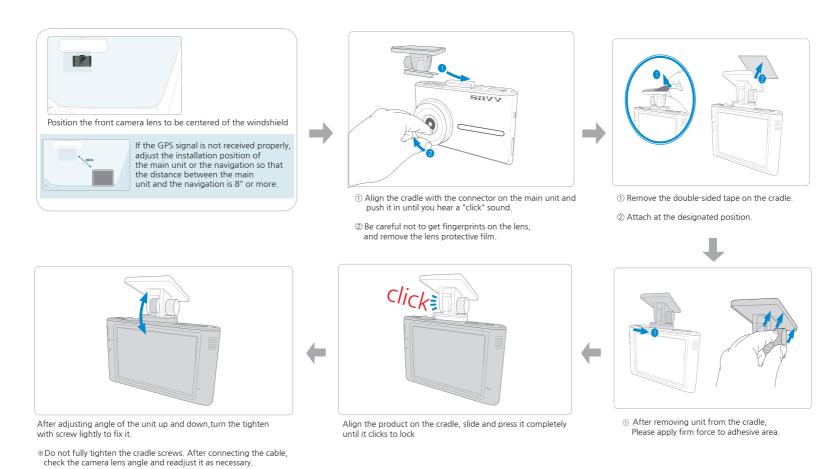

Rear camera installation

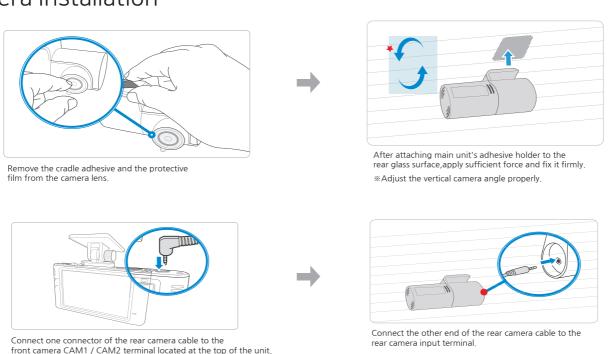

Connecting power cable

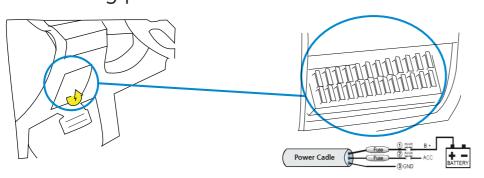

The fuse box is usually located under the dashboard of driver's seat.

*Fuse box location may vary by vehicle type.
Please refer to the owner's manual supplied with the vehicle.

Open the fuse box and use the tester to locate one B+, ACC terminal and remove each fuse.

- *① B+ fuse: Consistent Power source
 ② ACC fuse: Accessory power source
 ③ GND: Connect to the (-) terminal.
- Be sure to check the B +, ACC and GND label on the cable



Connect the B+ power cable to the DC-IN input terminal of themain unit.

Start the car to check if the main unit operates properly

